## **Overview:**

This article will guide how to addresses the vulnerability of WiFi Protected Setup (WPS) against brute force.

## **Resolution:**

Wi-Fi Protected Setup (WPS) is a method for setting up a new wireless router for a home network that includes a way for users to set up the network easily via different methods, which include:

- 1. Push Button Configuration
- 2. Register Wireless Client PIN Number
- 3. Enter AP's PIN Number in Wireless Client

The WPS standard requires a PIN to be used during the device setup phase. The vulnerability discovered in WPS makes that PIN highly susceptible to brute force attempts. ZyXEL devices will protect themselves after several failed attempts to authenticate by entering a lock-down state.

During the lock-down state, all WPS attempts using the method 3 will not work. The WPS will return from the lock-down state after a predetermined time period or users need to disable and enable WPS again. While the device is in a lock-down state, users can still use the Push Button Configuration method to connect to the wireless network.

Since only the Enter AP's PIN Number in Wireless Client method is vulnerable to brute force attack, ZyXEL Strongly recommends disabling this function to best protect your network.

# **Disable SOP**

Below are some step by step SOP that shown how to disable WPS for ZyXEL devices.

- VMG8324/VMG8924-Bx0A series and VMG1312-Bx0A series
- AMG1202/AMG1302/AMG1312-T10B series
- NBG Series devices
- SBG3x00 series
- LTE6101 series

To disable the Router WPS method for VMG8924 series and VMG1312 Series:

Below figures are using VMG8924 as example.

1. Login to the router GUI by typing <u>http://192.168.1.1</u> on an Internet browser's address bar.

ZyXEL			
Welcome to VMG89 and password to log	24-B10A configuration inter in.	rface. Please enter user	mame
Usemame:			
Password:			Login

2. Go to **Network Setting Icon** at the bottom and select **Wireless**.

ZyXEL VMG8924-B10A			English	🗧 🧚 Quick Start 🕒 Logout
Network Map			Viewing mode: 📑	Refresh interval: 20 Seconds ÷
Inlamet				
	<ul> <li>&gt; Broadband</li> <li>&gt; Wireless</li> </ul>			
VMG8924-B10A Unknown- Check the problems Unknown- The VMG8924-B10A cannot connect to Interne	<ul> <li>Home Networking</li> <li>Routing</li> <li>QoS</li> <li>NAT</li> <li>DNS</li> </ul>	between your modern and the VMC	38924-B10A .	Status OX
Connection Str	Interface Group	Security VolP	System Monitor	

3. Go to WPS Tab, Select **Disable** to disable the WPS function.



To disable the Router WPS method for AMG1202, AMG1302 and AMG1312 series:

Below figures are using AMG1312-T10B as example.

1. Login to the router GUI by typing <u>http://192.168.1.1</u> on an Internet browser's address bar.

ZyXEL		
	Welcome Welcome to AMG1312-T1 Please enter username au	0B configuration interface. nd password to login.
	Username:	
	Password:	
		Login

2. Go to **Network Setting Icon** at the bottom and select **Wireless**.

ZyXEL AMG1312-T10B					🧭 Wizard	E Logout
LAN Device				Viewing mode	: ERefresh Interval:	None ÷
Internet	WTT.					
	Broadband					
AMG1312-T10B	Wireless					
	Home Networking					
	> Static Route					System
	© QOS					Info
	Port Binding					
	Dynamic DNS					
Connection Sta	Network Setting	Security	System Monitor	Maintenance		

3. Go to WPS Tab, Select **Disable** to disable the WPS function.



To disable the Router WPS method for NBG Series devices. Using NBG419Nv2 as an example:

 Login to the router GUI (the default password is 1234) by typing <u>http://192.168.1.1</u> on an Internet browser's address bar.



2. Click on the **Expert Mode** on the top right of the Webpage.

NBG-419N v2	🕢 Home	🖉 Expert Mode	E Logout
Modem TTO TTO NBG-419N V2	12		Status
Game Power Saving Filte	tent r FF ON OFF	Firewall	Wireless Security

3. Go to **Configuration** menu on the left side of the navigation bar.

Zj	XEL NBG-419N v2	
-	Status	
-	During Information	
-	Device information	
14	Item	Data
	Host Name:	NBG-419N v2
Con	figuration are Version:	V1.00(AACU.5)C0
a res	Sys OP Mode:	Router Mode
	WAN Information:	
	- MAC Address:	CC:5D:4E:DB:91:D9
	- IP Address:	10.59.4.31
	- IP Subnet Mask:	255.255.255.0
	- Default Gateway:	10.59.4.1
	- DHCP:	Client

### 4. Select the **WPS** tab

Z	YXEL NBG-419	N v2								Welcom
	CONFIGURATION	Configuration > Network >	Wireless LAN > \	WPS						_
	Network     Wreless LAN     Wan     UAN     LAN     DHCP Server     NAT     DONS	WPS Setup WPS Setup PIN Number : Status	Advanced	QOS WPS	438	97209	WUS		Generate	
	Static Route     RIP     Security     Firewall     Content Filter     Management     Bandwidth Management     Remote Management     UPnP	Status : 802.11 Mode : SSID : Security :	u enable WPS, ti	ne UPnP servic	Cor 11 ا کرې No e will be turned	figured »(g/n iELDB91D8 Security	ally.		Release_Configuration	
							Apply	Cancel		

5. Click off the **Enable WPS** check box to disable the WPS function

Z	YXEL NBG-419	9N v2						
	CONFIGURATION	Configuration > Network > Wireless LAN > WPS						
	open all   close al	General MAC Filter Advanced	QoS WPS WPS Station Scheduling WDS					
	Network Wireless LAN WAN LAN DHCP Server	WPS Setup Enable WPS PIN Number :	43897209	Generate				
	<ul> <li>NAT</li> <li>DDNS</li> <li>Static Route</li> <li>RIP</li> </ul>	Status						
	⊟ Security	Status :	Configured	Release_Configuration				
	Firewall     Content Filter	802.11 Mode :	11 b/g/n					
	□ Management	SSID :	ZyXELDB91D8					
	+ Bandwidth Management	Security :	No Security					
	<ul> <li>Remote Management</li> <li>UPnP</li> </ul>	🗋 Note: If you enable WP	s, the <u>UPnP</u> service will be turned on automatically.					
			Аррі	y Cancel				

To disable the Router WPS method for SBG3x00 series:

1. Login to the router GUI by typing <u>http://192.168.1.1</u> on an Internet browser's address bar.

ZyXEL	
Welcome Welcome to SBG3300 Web Configurator. Please enter username and password to log in. Username:	
Password:	
Login	

2. Go to Network Setting menu and select Wireless.

ZyXEL								🎽 Quick Start	E Logout
Status	Status							Refresh interval:	None 🗸
58G3300	Device Information		System Status	_	_		_	_	
Hetwork Setting     Broadhaad     Wireless     LAN     Static IP/6 Neighbor     Routing     OoS     NAT     DNS     Interface Group/VLAN     USB Service     B Security     B Vent     G System Monitor     B Vent	Host Name: Model Number: Firmware Version: W4V Information L4V Information - IP Address: - IP 6 June Mask: - DHCP: - IP 66 Address: - IP 66 Lan DNS1 - PH6 Lan DNS1 - PH6 Lan DNS2 - Active IP 6 PerfuiPretin Length. - DHCP+6 Server: -	2/XEL 5863300 V1.00(A40W 1)_01140901G1 192.188.1.1 255.255.255.0 Server = 1880:ce54.4efte00:164 1880:1 1680:2 = On Stateless COSFUGED00011	System Up Time: Current DaterTime: System Resource: - CPU Usage: - Nemory Usage: WAN Status WAN Status WAN Status USA COL ETHNIAN ethDS prov120 ETHNIAN	Status Down Down Down Down Down	0 days 3 hon 01 Jan 2014 LB Active Unimown Unimown	urs 56 minutes 0357.05 IP Address	4.03% 53% Connection PPPoE PPPoE IPoE Celutar Celutar	Speed (DLUL)	e Virtu Dev
	WLAV Information - MAC Address - Status: - Status: - Channet: - Security - 802,11 Mode: - WPS:	CC5D4E000002 On ZyVEL00001 Auto (Current: 11) Mixed VIPA2PSKVIPA4PSK 802:115igh Mixed Linconfigured	IPSec VPII Status	Name		Application Scenario	Remote	Galeway Address	

3. Go to WPS Tab, Select **Disable** to disable the WPS function.

ZyXEL			🎽 Quick Start 📴 Logout
Status	Wireless General More AP MAC Authentication WPS WIM Others	Channel Status Scheduling	
Skatso Skatso Skatso Breakband Hirreless LAN State LVs Neighbor Reuting QoS - NAT - DNS - Interface Group/VLAN - USB Service B Security E VPN E System Hontor B Statemance	General       More AP       MACA Authentication       Weis       Others         Click the Release Configuration button to have the WPS status changed to:       WPS       WPS         WPS       WPS       Weis       WPS         WPS       Weis       WPS       WPS         WPS       Method 1       Pack Batton Configuration       Units       WPS         1. Click "Connect":       Connect":       Connect:       Connect:         Connect:       Connect:       Connect:       Connect:         Instantion only works on the first SSD.       2. Click the Release Configuration" button to have the WPS status changed	Channel Status       Scheduling         Unconfigured'. Otherwise the WPS status will remain in 'Configured' mode.         Enable ® Disable (The sellings in this screen are invalid if you select this.)         Enable ® Disable (The sellings in this screen are invalid if you select this.)         Register Wheless Client's PN Number         1. Enter the PN of your wireless client and click 'Register'         Register         2. Actuals WPS on the wireless client within 2 minutes after clicking Connect'.         dip 'Unconfigured'. Otherwise, WPS status is in 'Configured' mode.	Method 3 Enter AP's PN Number In Wireless Client Current Static Windonforzer 1 Static current PNI 13707156 on room wireless client Centrative PNI Number

#### LTE6101: What is the procedure to check whether WPS is disabled?

 Login to the web GUI of the device by entering 192.168.1.1 in an Internet browser. The username is "admin" and the password is "1234".

C 192.168.1.1 login.cgi	and the second sec	
	<b>ZyXEL</b> Welcome Welcome to LTE6101 configuration interface. Please enter username and password to login.	
	Language : Enolish • Username: admin Password:	

2. Go to Network Setting, Wireless, WPS.

Wireless		
General More AP WPS WM	M Scheduling	
Enabling Wi-Fi Protected Setup (WF instructions to establish WPS conner way to do WPS.	PS) lets you add new WPS-compatible devices to the wireless network with ease. Select one of the WPS methods and follow the ection. If your wireless client device is equipped with a WPS button, Push Button Configuration (PBC) method would be the preferable	
General		
WPS:	C Enable Disable	
WPS Configuration Summary		
AP PIN :	➢ Broadband	
Status :	> Wireless	
802.11 Mode :	> Static Route	
SSID :	> Ong	
Security :	> NAT	
Note :	▶ Dynamic DNS	
This feature is available only when	n WP4, PS	

3. In WPS configuration page, please check whether the function is disabled. If it is enabled, please do step 4. The below image shows the "Enable" configuration.

ZyXEL LTE6101	Language English 🔻	E Logo
Wireless		
General More AP WPS VVMM Scheduling		
Enabling Wi-Fi Protected Setup (WPS) lets you add new WPS-compatible devices instructions to establish WPS connection. If your wireless client device is equipped way to do WPS.	to the wireless network with ease. Select one of the WPS methods and follow the d with a WPS button, Push Button Configuration (PBC) method would be the preferable	
General WPS: ® Enable © Disable		
Add a new device with WPS Method		
Method 1 PBC	Method 2 PIN	
Step 1.Click WPS button WPS Step 2.Press the WPS button on your new wireless client device within 120 seconds	Step 1. Enter the PIN of your new wireless client device and then click Register Enter PIN here Register	
	Step 2.Press the WPS button on your new wireless client device within 120 seconds	
<b>L</b>	🐼 📨 🚯	
Connection Status Network Setting	Security System Monitor Maintenance	

4. To disable the function, please click on "Disable" and click on "Apply", as shown in the image below.

instructions to establish WPS con way to do WPS.	-3) tes you add new ne's-companie devices to the writeless nework with ease, sered one one ne's in an industriation ection. If your wretess client device is equipped with a WPS button, Push Button Configuration (PBC) method would be	the preferable
General		
WPS:	Enable Disable	
WPS Configuration Summar		
AP PIN :	00921602	
Status :	Not Configured	
802.11 Mode :		
SSID :		
Security :		
Note :		
This feature is available only who	n WPA-PSK, WPA2-PSK or No Security mode is configured.	