

# **Repeater Mode**

## Installation and firmware upgrade instruction

## Connect your computer to ARMOR X1 with an Ethernet cable



# Power on your ARMOR X1 by connecting the power adapter to it and plugging it to a wall outlet



# Wait 5 minutes and check that the LED is static red





-

## **ZyXEL**

**ARMOR X1** 

Model: WAP6806

\*\*\*\*\*\*

## **Change Default Password**

For security purpose, please enter a new administrator password

\*\*\*\*\*

Please write this new password down for future reference

Skip Change

1. Enter a new administrator password to your preference. We recommend you write this down in case you need it in the future.



## 2. Click "Change"

X













eaZy 123 ③ Set Your Repeater's Wireless Network 2.4 GHz Wireless Name (SSID): Zyxel	① zyxelsetup/ZyXEL/eaZy/genie4-ex.cgi          ZyXEL	(Optional) Change your	☆ :
2.4 GHz Wireless Name (SSID):   Zyxel     Zyxel	eaZy	123 repeat/extended Wi-Fi network name and password	
Zyxel <	3 Set Your Repeater's Wireless Network		
2.4 GHz Wireless Password (WPA2): 5 GHz Wireless Password (WPA2):			
87654321 < 87654321 <	0.4. Other Mercland, Descrivered (MIDA.0).	5 GHz Wireless Password (WPA2):	

Please write down all information that you've input here, so that you can refer to it in the future. When you're ready to apply this setup, click on "Apply"



 $\mathbf{T}$ 

<b>a</b>	🗅 EaZy Setup 123 X		-	×
$\leftarrow \rightarrow$	C () zyxelsetup/ZyXEL/eaZy/genie4-ex.cgi			\$ :
	ZyXEL eaZy 123	In this example, we added "-ext" to the Wireless Name		
	3 Set Your Repeater's Wireless Network			
	2.4 GHz Wireless Name (SSID): Zyxel-ext ◀	5 GHz Wireless Name (SSID): Zyxel-ext.speed		
	2.4 GHz Wireless Password (WPA2): 87654321	5 GHz Wireless Password (WPA2): 87654321 <		

Please write down all information that you've input here, so that you can refer to it in the future. When you're ready to apply this setup, click on "Apply"



 $\mathbf{T}$ 

<ul> <li>➡ C</li> <li>➡ C</li> <li>➡ C</li> <li>➡ Zyxels</li> </ul>	etup/ZyXEL/eaZy/genie4-ex.cgi		- □ × ☆:
	Zyxel-ext	Zyxel-ext.speed	
	2.4 GHz Wireless Password (WPA2): 87654321	5 GHz Wireless Password (WPA2): 87654321	
	IMPORTANT!		
	Please write down all information the you can refer to it in the future. Whe setup, click on "Apply"		
		1. Scroll down	
		2. Click "Apply"	
		Apply munications (C) 2015	



## **ZyXEL**

## eaZy 123 Setup

Applying your Wi-Fi settings...

## 

If you're using a wireless device to setup you may need to reconnect to your new Wi-Fi network...

### New 2.4 GHz Wi-Fi Network

#### New 5 GHz Wi-Fi Network

Wireless Name: Zyxel-ext Wireless Password: 87654321 Wireless Name: Zyxel-ext.speed Wireless Password: 87654321

ZyXEL Communications (C) 2015

## Wait for it to apply

×

 $\times$ 

## B

## This site can't be reached

The connection was reset.

### Try:

- · Checking the connection
- · Checking the proxy and the firewall
- Running Windows Network Diagnostics

#### ERR\_CONNECTION\_RESET

Reload

If you see this, wait for 5 minutes, then press 'Reload' proceed to next step



$ ightarrow$ $\mathbf{C}$ $(i)$ zyxelsetu	up/ZyXEL/dashboard.cgi		\$
ZyXEL	ARMOR X1	English  Velcome: admin	Logout   eaZy123 A Home i Ab
Status		Refresh I	nterval: NONE • Refresh
	Queters Information		
	System Information	WADOOOC	
	Host Name:	WAP6806	
	System Mode:	Repeater Mode	
	Hardware Version:		
	Firmware Version:	V1.00(ABAL.4)C0	
	System Up Time:	0 day: 0 hour: 23 minutes	
	Current Date/Time:	2017-Mar-21/01:08:26	
	Ethernet Information		
	MAC Address:	58:8B:F3:B5:36:C0	
	IP Address:	192.168.87.21	
	Subnet Mask:	255.255.255.0	
	Encapsulation mode:	IP over Ethernet (IPoE)	
	Gateway:	192.168.87.1	
	DNS Server:	192.168.87.1	
	IP Alias:	192 100 1 0	
	Subnet Mask:	255	
		Click the Profile	eicon
	AP Connection Statu	s - 2.4G	
	MAC Address:	N/A	
	SSID:	N/A	
	Channel:	N/A	
	Security:	N/A	
	Statue	Disconnected	

<b>1</b>	│ 🕒 .::Welcome to ZyXEL ARℕ	×								- 0	×
←	ightarrow $ ightarrow$ $ ig$	zyxelsetup/ZyXE	EL/Maintenan	nce/maint	tenance.cgi						☆ :
	ZyXEL	ARMOR X1	1				English Velcome: admin	Logout	<u>eaZy123</u>	♠ <u>Home</u>	i <u>About</u>
	MAINTENANCE oper	n all   close all	Ger Pa	neral asswor Old Pas New Pa	iystem > General Time Setting rd Setup ssword : assword : n New Password	· · · · · · · · · · · · · · · · · · ·	Confirm Reset				
						E	Expand "Maintenc	ince''			
			4								۱.
			🖵 Messag	ges: Re	eady						

× \* ■ .::Welcome to ZyXEL ARN × C O Not secure | zyxelsetup/ZyXEL/Maintenance/maintenance.cgi ☆ English Velcome: admin Logout | eaZy123 + Home i About ZyXEL ARMOR X1 ☐ Maintenance > Firmware Upgrade > Firmware Upgrade MAINTENANCE Firmware Upgrade open all | close all Maintenance Firmware Upgrade Ge. System To upgrade the internal device firmware, browse to the location of the binary (.BIN) upgrade R Firmware Upgrade file and click Upgrade Upgrade. Upgrade files can be downloaded from website. If the upgrade file is compressed (.ZIP file), you must first extract the binary (.BIN) file. In some Backup/Restore cases, you may need to reconfigure. Reboot Choose File No file chosen File Path: Online Firmware Upgrad Check For Latest Firmwar 1. Click "Firmware Upgrade" Upgrade 2. Click "Check For Latest Firmware"

□ **Messages:** Ready

B .::Welcome to ZyXEL ARN ×

\*

Ge.

R

## English Velcome: admin Logout | eaZy123 A Home i About ZyXEL ARMOR X1 > Firmware Upgrade > Firmware Upgrade MAINTENANCE Firmware Upgrade open all | close all ■ Maintenance Firmware Upgrade System To upgrade the internal device firmware, browse to the location of the binary (.BIN) upgrade Firmware Upgrade file and click Upgrade Upgrade. Upgrade files can be downloaded from website. If the upgrade file is compressed (.ZIP file), you must first extract the binary (.BIN) file. In some Backup/Restore cases, you may need to reconfigure. Reboot Choose File No file chosen File Path: **Online Firmware Upgrade** Check For Latest Firmware Now Current Firmware Version: V1.00(ABAL.4)C0 The Newest Firmware Version: V1.00(ABAL.5)C0 Upgrade WAP6806 V1.00(ABAL.5)C0 release note.pdf Read Click "Upgrade" next to "The Newest Firmware Version"

## ☐ Messages: Ready

# Wait a few minutes

## **ARMOR X1 Is Restart Now**

ARMOR X1 will now reboot. As there will be no indication of when the process is complete, please wait for two minutes before attempting to access the router again.



## Restarting now, Please wait...

## Wait for 2 minutes to restart

×



## ZYXEL

**ARMOR X1** 

Model: WAP6806

## Login Password

Please enter the device's administrator password

Default: 1234

Login

If you see this new logo, you have successfully upgraded your ARMOR X1 and completed your setup!



×

